

D15 Flow Control Vacuum Pump and Compressor Series

User Guide

Issue 08

Date 2020-06



User Guide

Copyright © Chengdu Hilin Technology Co., Ltd. 2020. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means

without prior written consent of Chengdu Hilin Technology Co., Ltd.

Trademarks and Permissions

Hilintec is a trademark of Chengdu Hilin Technology Co., Ltd.

All other trademarks and trade names mentioned in this document are the property of

their respective holders.

Notice

The purchased products, services and features are stipulated by the contract made

between Chengdu Hilin Technology Co., Ltd. and the customer. All or part of the products,

services and features described in this document may not be within the purchase scope or

the usage scope. Unless otherwise specified in the contract, all statements, information,

and recommendations in this document are provided "AS IS" without warranties,

guarantees or representations of any kind, either express or implied.

The information in this document is subject to change without notice. Every effort has

been made in the preparation of this document to ensure accuracy of the contents, but all

statements, information, and recommendations in this document do not constitute a

warranty of any kind, express or implied.

Chengdu Hilin Technology Co., Ltd.

Address: No.3663 Section 2 Muhua Road

Shuangliu District

Chengdu Sichuan China 610000

Website: http://www.hilintec.com

Tel: +86-28-62567958

About This Document

Purpose

This document is a description of the D15S flow control vacuum pump and compressor series in the test period, which is used to guide the relevant technical personnel to understand the product characteristics.

Intended Audience

This document is intended for technical personnel. You should have a good understanding of your product and have a clear concept of the relevant parameters, specifications, and other information of the applications of the micro pump.

Keyword

PWM Speed Control, working status indicator, related parameters, wiring instructions

Change History

The change history accumulates each update of this document. The latest version of the document contains all the previous updates.

Issue	Date	Product Version	Issuer	Modification
01	2018-3	1.0	LT	First official release
02	2018-10	1.0	LT	Add product images and models of matching speed controllers
03	2018-11	1.0	LT	Add product version description and speed feedback description
04	2019-09	1.0	LYZ	Modify the document format
05	2019-12	1.0	FB	Update notes in section 3.1
06	2020-02	1.0	FB	Add model description; update outline drawing
07	2020-03	1.0	FB	Update definition of FG feedback signal
08	2020-06	1.0	FB	Update medium description

Contents

About This Document	I
Change History	II
Contents	III
1 Product Characteristics	1
1.1 Compact Size	1
1.2 Working Status Indicator	1
1.3 Brushless Motor	1
1.4 Protections	1
2 Special Features	2
2.1 Speed Control Feature	2
2.2 Warning Feature	
3 Technical Parameters	3
3.1 Key Parameters	3
3.2 Description of Versions	3
3.3 Life-time Test Conditions	4
3.4 Working Conditions	
3.5 Materials	
3.6 Parameter Curve	5
4 Product Model Description	6
4.1 Brief Description of Model Naming	6
This series of pumps are mainly: basic type	6
5 Electrical Connection	7
6 Cautions	10
7 Dimensions	11
8 Appearance	12

Product Characteristics



1. 1 Compact Size

The product weighs about 50g and the overall size is about 50x29x36mm.

1.2 Working Status Indicator

The bottom case of the pump is made of light-transmitting material ABS, which can visually reflect the working status of the pump through the indicator light.

1. 3 Brushless Motor

This model is driven by brush-less motors which have the advantages of long service life, low interference and high reliability.

1.4 Protections

Equipped with overheating protection, overload protection and reverse connection protection function to prevent accidental damage to the pump.

Special Features

2. 1 Speed Control Feature

The flow can be changed by adjusting the motor speed of the pump (by adjusting the PWM duty cycle).

Or by ordering our company's special speed controller for micro pump (model: TS-G12) to regulate the speed.

2. 2 Warning Feature

The color of the indicator light displayed on the transparent bottom case (as shown in Figure 2-1 and Figure 2-2) can feedback the working status of the pump:

- 1. It is normal when the blue light flashes regularly;
- 2. When the light remains red, it is abnormal, i.e. the motor runs too low;
- 3. When the red and blue lights alternately flash, it is abnormal, and at this time, the motor speed is low and unstable;
- 4. The indicator light is off when the positive and negative connections are reversed;
- 5. When the voltage is out of the working voltage range $(3.2V\sim6V)$, the indicator light is off.



Figure 2-1 Normal working status



Figure 2-2 Abnormal working status

Technical Parameters

3. 1 Key Parameters

	Voltage (V DC)	Load Current (A)	Flow (L/min)		Relative	Maximum	
Model			Peak Flow	Average Flow	Vacuum (-kPa)	Output Pressure (kPa)	Weight (g)
D15S	5	≤280	≥0.4	≥0.4	≥18	≥22	≈ 50

Note:

1. Working voltage is 3.2V~6V, input voltage change will affect the load current;

2.Unless otherwise specified, the technical parameters are measured under the conditions of temperature 25°C and standard atmospheric pressure of 101kPa. For products with other parameters and specifications, you can contact us to customize.

3. The parameters in the table are measured at the maximum speed of the motor under rated voltage. When the motor speed changes, the pressure/vacuum level is basically unchanged.

4. The peak flow rate in the table refers to the flow value measured with a rotameter, and the average flow rate is measured with a soap film flow-meter.

3. 2 Description of Versions

Version Performance	Simplified Version	Standard Version	Premium Version
Life time	>2500h	>6000h	>10000h
Noise	*	**	***

Reliability	*	**	***
Parameter Consistency	*	**	***
Speed Feedback	None	Equipped with FG signal feedback	
Speed Controller	None	Compatible with TS-G12 type speed controller	

Note: 1. The more \bigstar , the better performance of this item.

2. The noise data of the simplified version and the standard version are not specified. For the noise data of the premium version, please refer to the latest information.

3. 3 Life-time Test Conditions

In a clean, non-corrosive laboratory, the pump carries a full load(the

inlet is blocked and the outlet directly connected to the atmosphere), and operates continuously around the clock. The ambient temperature is $5^{\circ}\text{C} \sim 33^{\circ}\text{C}$, fluctuates with the climate; the relative humidity is $30\%\sim90\%$, which fluctuates with the climate.

3. 4 Working Conditions

- 1. Environment: Permissible ambient temperature range of the pump is $0 \,^{\circ}\mathrm{C} \sim 50 \,^{\circ}\mathrm{C}$, permissible relative humidity is $\leq 90\%$, no condensation. The pump should not be exposed to the sun, and should work in a clean and ventilated environment.
- 2.Medium: Permissible gaseous media temperature range is $0\,^\circ\text{C} \sim 50\,^\circ\text{C}$. The medium is allowed to be rich in water vapor, but cannot contain particles or oil mist.

3. Load:

- 1) When used as a compressor: the outlet can run at full load (i.e. the inlet is completely blocked), but the applied load cannot exceed the maximum discharge pressure of the pump; the inlet must keep unobstructed.
- 2) When used as a vacuum pump: the inlet can operate at full load (i.e. the inlet is completely blocked), but the applied load cannot

exceed the maximum vacuum of the pump; the outlet must be unobstructed.

3.5 Materials

- 1. The materials of the wetted parts: reinforced nylon and EPDM rubber, which have certain corrosion resistance. Please check the chemical resistance and compatibility of the medium according to the wetted material.
- 2. The pump body is made of reinforced nylon for plastic parts, EPDM for elastomer parts and light-transmitting ABS for bottom case.

3. 6 Parameter Curve

Vacuum degree-flow curve, there are individual differences between different micro pumps, this curve is a statistical value, only as a technical reference for users to confirm the working point. The "flow" mentioned in this section refers to the "average flow".

(to be updated ······)


Note: 1. The maximum average flow rate of the curve will be slightly lower than the nominal value, which is due to the resistance of the test pipeline components, which leads to the attenuation of the flow;

2. The value of this curve is for reference only, not as a basis for product acceptance.

Product Model Description

4. 1 Brief Description of Model Naming

Only basic type type available for this series of pumps.

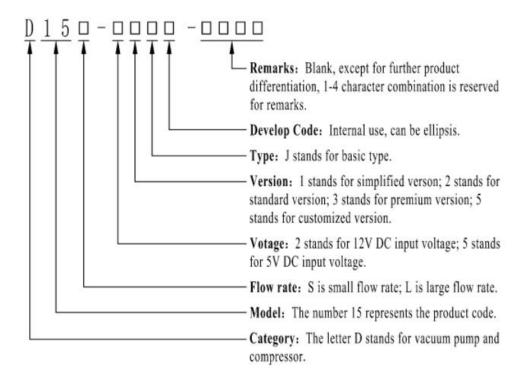

Note: If the remarks starts with a letter, it means a special custom function. For example, letter"GJ" means customized high-temperature medium function, and "GH", means customized high-temperature environment function. If it starts with a number, it means other information.

Example 1: D15S-51J (D15S pump, simplified version of 5V voltage basic type

Electrical Connection

The electrical connection is for connecting the external power supply and signal wires of this product. The definition of the wires is distinguished by color.

5. 1 **Definition of Signals**

This is a product with basic functions. There are 3 wires. The wiring and usage instructions are as follows.


S.N	Wire	Signal	Function	Definition of Signal	Remarks
1	Red	Vm	Positive pole of the power supply	+3.2V~+6V	The voltage is not allowed to exceed 6V, otherwise it will burn the motor.
2	Black	GND	Negative pole of the power supply,ground		
3	White	PWM	Pulse Width Modulation (PWM)	Pulse width modulation signal, active at low level 0V≤low level≤ 0.8V Start 2V≤high level≤5V Stop carrier-frequency range: 15kHz~25kHz	Select a fixed a value of frequency within the range of 15kHz ~ 25kHz, and adjust the speed by changing the duty cycle
4	Yellow	FG	FG feedback signal	The motor speed feedback signal is a 3.3V pulse signal, and the motor outputs 6 pulses per rotation.	Speed feedback function unavailable with simplified version and there is no such wire.

Note: More wiring will be added with more functions to be added into the product, and this table will also be updated.


5. 2 Logical Wiring Diagram

When the speed control function is not needed, the white connection wire PWM input signal and the black connection wire can be grounded together, the yellow wire must be insulated and wrapped, and the micro pump will work at the rated speed.


Note: The speed feedback function is unavailable with the simplified version so there is no yellow FG signal line.

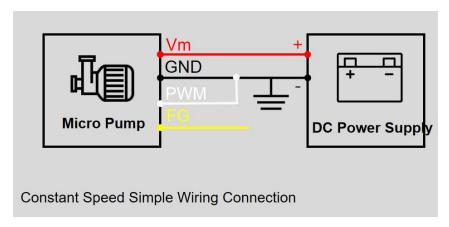

When you need to use the PWM speed control function, you need to use a signal source that supports PWM signal output (function signal generator, MCU, PLC, etc.), connect the signal source output to the white PWM input cable, and connect the PWM signal source ground to the DC power ground. If you do not need to monitor the speed feedback signal, the FG signal line must be insulated and wrapped. The speed feedback function is unavailable with the simplified version so there is no yellow FG signal line.

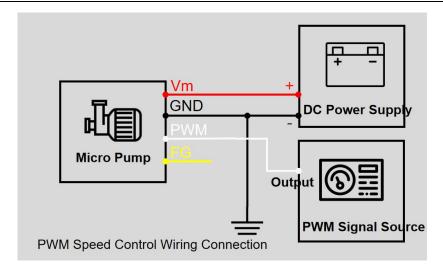

When you need to use the PWM speed control function and obtain the FG feedback, you need to use a signal source that supports PWM signal output (function signal generator, MCU, PLC and other controllers) and an oscilloscope or host computer, and connect the signal source output to the white PWM input. Connect the PWM signal source ground to the DC power ground, connect the yellow FG feedback signal line to the oscilloscope probe or the host computer input, and connect the oscilloscope or host computer ground wire to the black ground wire. If the FG signal wire is not used, it must be insulated and wrapped. The speed feedback function is unavailable with the simplified version so there is no yellow FG signal line.

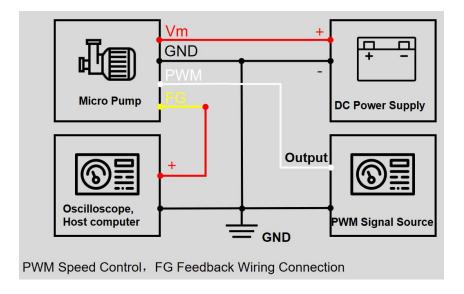

6 Cautions




Please read the instructions in this chapter carefully and follow the instructions strictly before use.

- 1. This product has no waterproof, dust-proof, and explosion-proof functions and cannot be used in flammable and explosive environments!
- 2. Foreign matter must not fall into the gas nozzles, and there should be no solid particles in the medium, otherwise the micro pump will be damaged!
- 3. The outlet must keep unobstructed, otherwise the micro pump will be damaged!
- 4. When this product is used to transfer harmful medium, it must be double-sealed to ensure personal safety!
- 5. The matching piping components and containers must have sufficient strength to ensure personal safety!
- 6. Please follow the instructions strictly!

Dimensions

Overall Dimensions of C15 D15 S15 (Unit: mm)

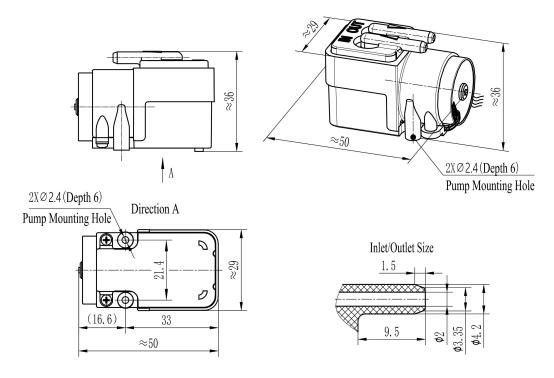

Appearance











